

HOW TO SETUP NVR PLUG AND PLAY

1. IP cameras must be within 330ft of NVR
2. Connect IP camera with NVR with CAT5/6 cable with RJ45 ends
3. You do not need change any settings in the NVR to get these cameras to work, plug them in and they will automatically connect and start to appear on your screen

Side Note: Even though these are Plug-n-Play cameras they are still IP cameras with IP addresses not analog cameras. Once you plug a camera into a port it is assigned to that port. Changing ports to move cameras to different channels can cause IP conflicts and can be a major headache to reset.

If you want to move camera #3 to camera #1, from your live view simply click and drag camera #3 into camera #1 spot. Then rename the cameras by Right clicking > Enter MENU > CAMERA > OSD. Select CAMERA NAME and rename the camera. Select CAMERA and a drop down will appear with all your cameras